

FS10 External Activation Switch



9. december 2024

FS10 External Activation Switch makes it possible to activate the Aerosol Generators without having direct access to the FS10 panel. For example, it can be placed just outside the protected area or places where it must be possible to activate the Aerosol Generators.

The FS10 External Activation Switch must be configured during initial setup of the FS10 main unit. (Max 5pcs pr. FS10 main unit)


The FS10 External Activation Switch is monitored by the FS10 main unit. This means that a “system fault” will be indicated if the External Activation Switch is disconnected.

It's possible to seal the switch with the included tamper seal.



- JKE Part no. 0311
- Dimensions: (X x Y x Z) (89 x 80 x 65,5) mm
- Weight: 185g

Mounting:

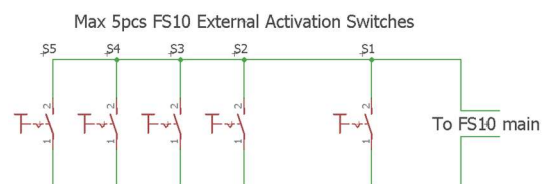

JK e-solutions ApS
Røjklitvej 28
Holmsland
DK-6950 Ringkøbing

Tel. +45 7734 7712
E-mail info@jke-solutions.dk
VAT no. 33 50 86 89