

FS10 External Isolation Switch



9. december 2024

FS10 External Isolation Switch makes it possible to activate “Isolate” mode without having direct access to the FS10. For example, it can be placed just outside the protected area.

The FS10 External Isolation Switch can also be used to “Hold” an ongoing activation, or “Cancel” an ongoing activation by holding it for 20 seconds.

The FS10 External Isolation Switch must be configured during initial setup of the FS10 main unit.

In normal mode the green led “ON” is on, when “Isolated/Hold” is active the yellow led “ISO” is on.

The FS10 External Isolation Switch is monitored by the FS10 main unit. This means that a “system fault” will be indicated if the Isolation Switch is disconnected.



- JKE Part no. 0312
- Dimensions: (X x Y x Z) (89 x 80 x 59) mm
- Weight: 170g

Mounting:

in Isolation Switch.



in FS10 main box.



JK e-solutions ApS
Røjklitvej 28
Holmsland
DK-6950 Ringkøbing

Tel. +45 7734 7712
E-mail info@jke-solutions.dk
VAT no. 33 50 86 89